MOTOBLOUZ
#ENJOY THE RIDE

SUPPORT POUR MOBILE
NOTICE D'INSTALLATION

Spare parts

Numéro	YF-290 - Modèle de guidon moulé sous pression	QTE
①	Pièces en caoutchouc pour rotule de guidon	1
②	Pièces en caoutchouc pour join de rotule de guidon	1
③	vis à tête hexagonale	1
④	Stainless steel hex socket screws	2
⑤	Vis à tête hexagonale en acier inoxydable	1
⑥	Petite clé hexagonale	1
⑦	patin en caoutchouc 70*20*1,0 mm	1
⑧	Pince gauche et droite	1

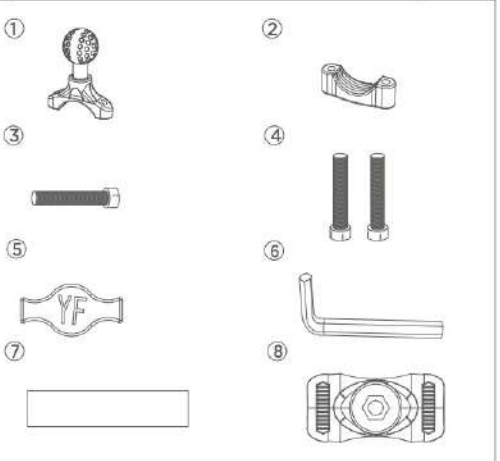


Schéma d'installation

1 : Réglage de l'espacement gauche et droit du clip du téléphone

Desserrez légèrement les vis de fixation des clips gauche et droit du téléphone portable jusqu'à ce que les clips gauche et droit puissent être déplacés, puis ajustez l'espacement des clips gauche et droit à la position appropriée en fonction de la taille du téléphone portable utilisé, puis serrez les vis de fixation des clips gauche et droit pour les fixer (Figure 1).


2 : Installation du support pour téléphone portable sur la poignée

2.1.1. Installer les accessoires de fixation au guidon. Fixez une extrémité des pinces gauche et droite correspondantes à la rotule du support pour téléphone portable, puis installez la rotule du guidon en alliage d'aluminium à l'autre extrémité des pinces gauche et droite, puis serrez les boutons de serrage gauche et droit (voir figure 2).


2.2.Installez le support pour téléphone portable. Retirez le film protecteur du patin antidérapant en silicone 3M, collez-le à l'endroit où le support pour téléphone portable doit être installé sur le guidon de la moto, puis fixez les parties supérieure et inférieure de la poignée en alliage d'aluminium à l'endroit où le patin antidérapant 3M est collé.
Vissez ensuite les vis hexagonales en acier inoxydable M5*30 à l'aide de la clé hexagonale M5 fournie, puis verrouillez les parties supérieure et inférieure du support en alliage d'aluminium sur le guidon.
Desserrez ensuite légèrement les boutons de serrage gauche et droit du support pour téléphone portable, ajustez le support dans la position appropriée et resserrez les boutons de serrage gauche et droit pour terminer l'installation (voir figure 3).

Handle installation diagram

(Figure 1)

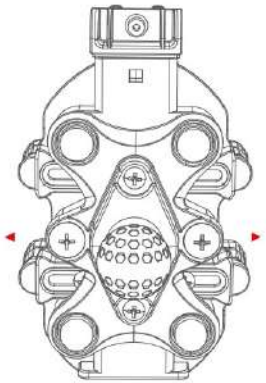


(Figure 2)

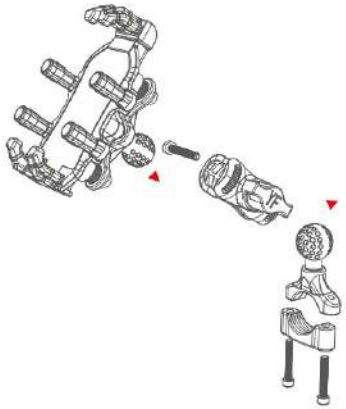

(Schéma d'installation)

(Figure 3)

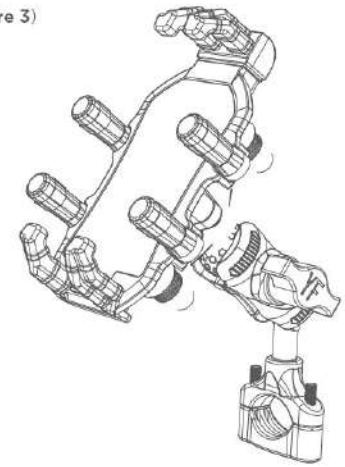


(Schéma d'nstallation terminée)

MOTOBLOUZ
#ENJOY THE RIDE

MOBILE PHONE RACK
INSTALLATION INSTRUCTIONS

Spare parts

Number	YF-290- Die cast handlebar model	QTY
①	Rubber parts for ball head on handlebars	1
②	Rubber parts under the handlebars	1
③	outer hexagon screw	1
④	Stainless steel hex socket screws	2
⑤	Left and right clamp knob	1
⑥	Small hex wrench	1
⑦	rubber pad 70*20*1.0MM	1
⑧	Left and right clamp	1

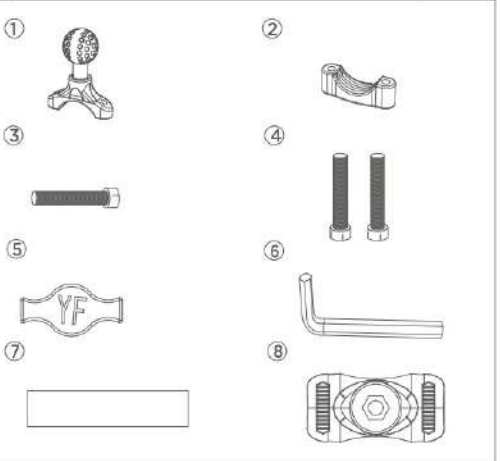

Installation diagram

1: Adjusting the left and right clip spacing of the phone

Slightly loosen the fixing screws of the left and right clips of the mobile phone until the left and right clips can be moved, and then adjust the spacing of the left and right clips to the appropriate position according to the size of the mobile phone used, and then tighten the fixing screws of the left and right clips to fix them,(Figure1)


2: Installing mobile phone rack of handle

2.1.1. Install handlebar fixing accessories
Clamp one end of the matching left and right clamps to the ball head of the mobile phone bracket, and then install the ball head of the aluminum alloy handlebar on the other end of the left and right clamps, and then tighten the left and right clamp knob (see Figure 2).


2.2.Install the mobile phone bracket
Tear off the protective film on the silicone 3M stop slip, stick it on the position where the mobile phone bracket is to be installed on the handlebar of the motorcycle, and then clamp the upper and lower part of the aluminum alloy handlebar hand on the position where the handlebar hand is affixed with the 3M stop slip bar, and then screw on the hexagonal stainless steel M5*30 screws with the distributed M5 hex wrench, and lock the upper and lower part of the aluminum alloy handlebar hand on the handlebar hand. Then slightly loosen the left and right clamp knob of the mobile phone bracket, adjust the mobile phone bracket in the appropriate position and tighten the left and right clamp knob, so that the installation is complete (see Figure 3).

Handle installation diagram

(Figure 1)

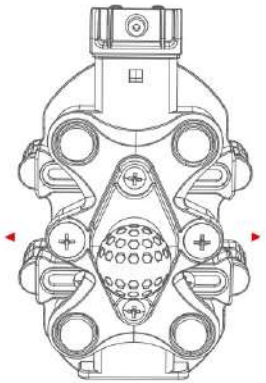


(Figure 2)

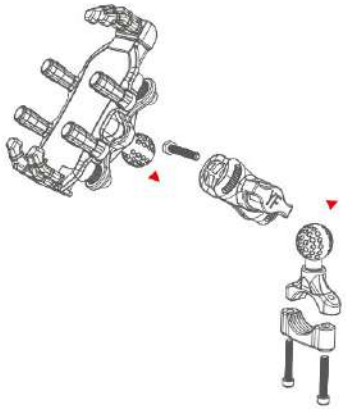

(Installation diagram)

(Figure 3)

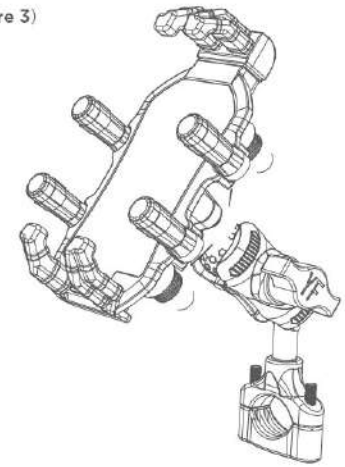

(Installation completion diagram)