

NOTICE DE MONTAGE

SAUTE-VENT ERMAX ADAPTABLE SUR MT07 2018 → ∞ Durée estimée de montage : 15 min

Kit de fixation

- 2 vis BHc 6x35 noires
- 2 vis BHc 6x20 noires
- 4 vis BHc 5x25 noires
- 1 support en aluminium
- 4 inserts caoutchouc Ø5 larges
- 4 rondelles plastique Ø5




Montage

- Démontez les 4 vis d'origine sur la tête de fourche (photo ci-dessous).



- Positionner le support en aluminium sur la tête de fourche à l'aide des 2 vis 6x20 et des 2 vis 6x35 comme ci-dessous et le serrer :

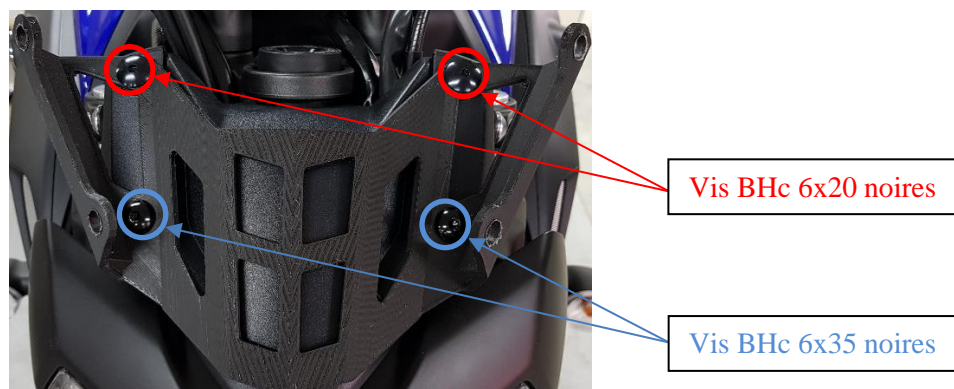

- Placer les 4 inserts caoutchouc Ø5 larges sur le support en aluminium Ermax aux 4 emplacements restants.
- Monter le saute-vent Ermax sur le support en aluminium et le fixer à l'aide des 4 vis BHc 5x25 et des 4 rondelles plastique Ø5. Ajuster la position du saute-vent sur le support puis serrer le tout.

« ATTENTION »

- * Tout accessoire monté ne sera plus considéré comme neuf et ne sera **ni repris ni échangé**.
- * Les accessoires Ermax sont conçus pour des **montes d'origine**. Ils ne seront pas garantis s'ils sont utilisés dans d'autres conditions.
- * En raison des tolérances de fabrication des véhicules, indépendantes de notre volonté, certains produits Ermax peuvent nécessiter des ajustements lors de la fixation.
- * Les marques de fabricant de motos citées sont indiquées exclusivement comme référence nécessaire à la destination des accessoires Ermax.
- * Attention aux serrages excessifs qui pourraient abîmer ou casser nos accessoires en plastique et les vis en aluminium.
- * Les bulles abîmées par un **lavage inadéquat** ne sont pas garanties (dissolvant, essence, détergent, produits abrasifs, corrosifs...). Essuyer immédiatement les liquides de frein ou de batterie qui pourraient déborder sur les accessoires.

FITTING INSTRUCTIONS

ERMAX NOSE SCREEN **ADAPTABLE ON MT07 2018** → ∞ *Estimated mounting time: 15 min*

Fitting kit


- 2 screws BHc 6x35 black
- 2 screws BHc 6x20 black
- 4 screws BHc 5x25 black
- 1 aluminium support
- 4 wide rubber inserts Ø5
- 4 plastic washers Ø5

Fitting instructions

- Remove the 4 original screws from the holder that maintains the headlight (photo below).



- Place the aluminium support on the original holder with 2 screws 6x20 and 2 screws 6x35 as shown below and tighten:

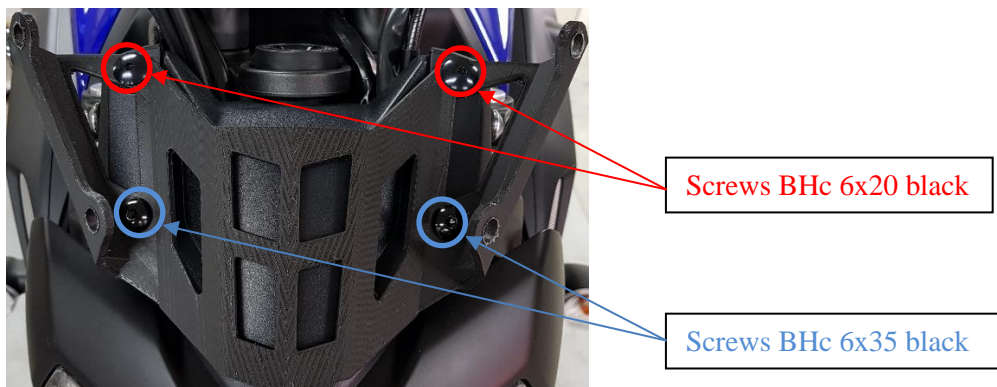

- Place the 4 wide rubber inserts Ø5 on the Ermax aluminium support at the remaining 4 locations.
- Place the Ermax nose screen on the aluminium support and fix it thanks to the 4 screws BHc 5x25 and the 4 rubber washers Ø5. Adjust the nose screen position on the holder and tighten everything.

« CAUTION »

- * Accessories gone up on the motorbike will not be any more considered as new and will be **neither retaken nor exchanged**.
- * Ermax accessories are foreseen for **original equipments**. They will not be guaranteed if they are used in others conditions.
- * Due to vehicles made tolerances, beyond our control, some Ermax products might need adjustments to fit.
- * The mentioned label of motorbikes's manufacturers are indicated exclusively as a reference to Ermax accessories.
- * Care to excessive clampings which may damage or break our plastic accessories and aluminium screws.
- * Screens damaged by an **inadequat washing** are not guaranteed (abrasive, corrosive ... products, solvent, thinner, benzine ...). Wash immediately brake or battery fluid which may flow on accessories.

